

ข้อมูลเทคนิค...การปรับตั้งจานแบบ...ไทยแซท

จังหวัด แพร์

ละติจูด
18.14

ลองจิจูด
100.14



ตำแหน่ง	ดาวเทียม	แนว LNB	มุมก้ม	มุมสาย
49.0 E	Yamal 202	-	61.0	255.9
57.0 E	NSS12	-	53.1	251.6
64.2 E	Intelsat 906	-	46.0	246.8
66.0 E	Intelsat 17	6:49	44.2	245.3
78.5 E	Thaicom 5/6	7:16	32.6	231.9
68.5 E	Intelsat 20	6:53	41.8	243.2
75.0 E	ABS-2	7:07	35.7	236.4
76.5 E	Apstar 7	7:10	34.4	234.6
83.0 E	Insat 4A	7:30	29.0	224.7
87.5 E	Chinasat12,ST2	7:48	25.8	215.8
91.5 E	Measat 3/3A	8:07	23.5	206.0
93.5 E	Insat 3A/4B	8:19	22.6	200.5
100.5 E	AsiaSat 5	9:02	21.3	178.8
105.5 E	AsiaSat 7	9:33	22.2	163.2
108.2 E	Telkom 1	9:48	23.2	155.5
110.5 E	Chinasat 10	10:00	24.4	149.6
113.0 E	Palapa D	10:12	25.9	143.7
115.5 E	ChinaSat 6B	10:22	27.6	138.6
125.0 E	ChinaSat 6A	10:52	35.5	123.9
132.0 E	Vinasat 1,2	11:06	42.0	116.6
134.0 E	Apstar 6	11:10	43.9	114.9
138.0 E	Telstar 18	11:16	47.8	111.8
166.0 E	Intelsat 19	11:44	75.6	97.9
169.0 E	Intelsat 805	11:46	78.5	96.9
180.0 E	Intelsat 18	11:53	89.1	93.2